



Extra Unused Pins

PA0	TP4 PA0 Test Point	PB4	TP14 PB4 Test Point
PA1	TP5 PA1 Test Point	PB5	TP15 PB5 Test Point
PA2	TP6 PA2 Test Point	PB8	TP16 PB8 Test Point
PA3	TP7 PA3 Test Point	PB10	TP17 PB10 Test Point
PA4	TP8 PA4 Test Point	PB11	TP18 PB11 Test Point
PAB	TP9 PA8 Test Point	PA15	TP12 PA15 Test Point
PA9	TP10 PA9 Test Point	PB3	TP13 PB3 Test Point
PA10	TP11 PA10 Test Point	PC0	TP29 PC0 Test Point
PC1	TP30 PC1 Test Point	PC13	TP24 PC13 Test Point
		TP26	GND Test Point
		TP27	GND Test Point
		TP28	3.3V Test Point

