

NOTES: (UNLESS OTHERWISE SPECIFIED)

- 1.1. JPI CLOSED, JPI OPEN, JPI OPEN, VBUS POWERED SW BUS UNTIL EXT PWR (VCC) APPLIED, THEN SW BUS IS POWERED BY VCC. (PRESET/DEFAULT OPTION)
- 1.2. JPI OPEN, JPI CLOSED, JPI OPEN, SW BUS TO SOLELY POWER BY RAW EXT PWR (VCC).
- 1.3. JPI OPEN, JPI OPEN, JPI CLOSED, BY BUS IS SOLELY POWERED BY RAW USER VBUS. CAUTION: FALSE INDICATION OF EXT PWR VIA VCC SNS WILL OCCUR IF EXT PWR CONNECTED.
- 1.4. JPI OPEN, JPI OPEN, JPI OPEN, NO SW POWER IS SUPPLIED TO THE UFC. WARNING: UFC WILL NOT FUNCTION IN THIS STATE.
2. ENABLING OPD0/OPD1 TO ACTIVATE THE OPTION CUING USE DPINCL TO DRIVE THE INDICATOR WHICH TURNS ON CS/DS TO SHOW THE OPTION CUING MARKER.

