
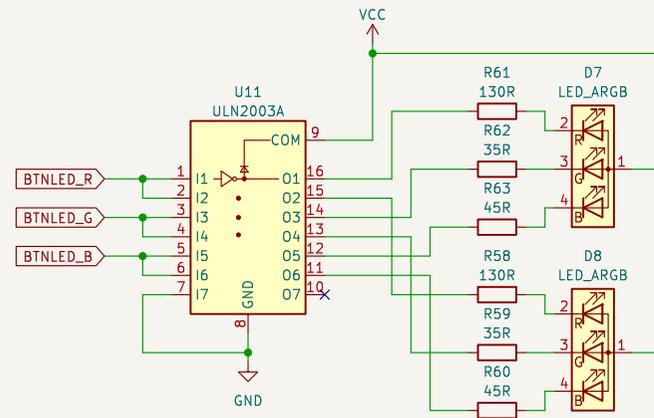
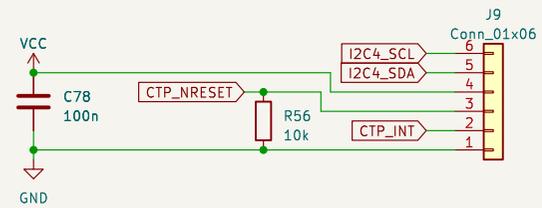


TODO connect VCC to VREF+ to allow measurement of VCC supply voltage (by comparison with internal VREFINT)

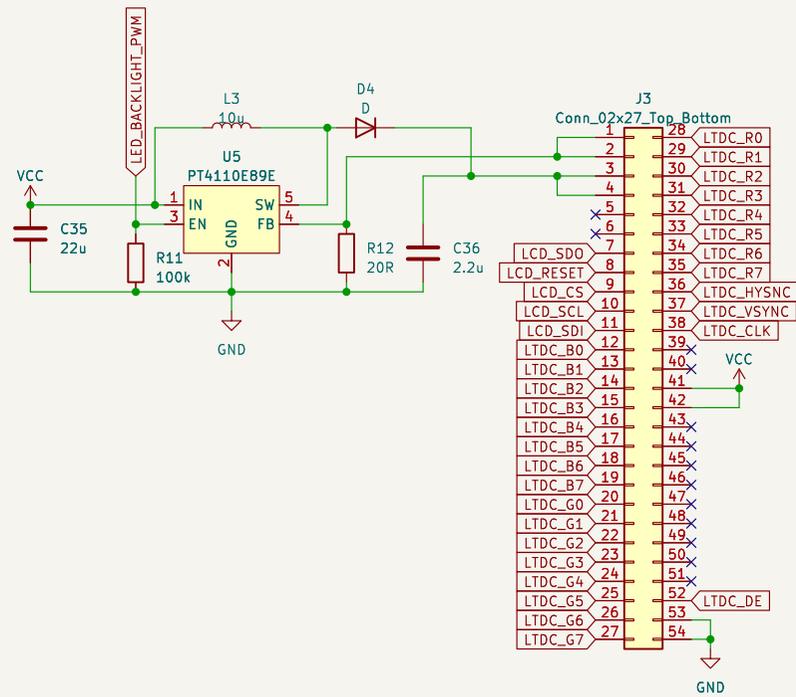


Sheet: /Screen/
 File: screen.kicad_sch

Title:

Size: A4
 KiCad E.D.A. 9.0.0

Date:

Rev:
 Id: 3/6

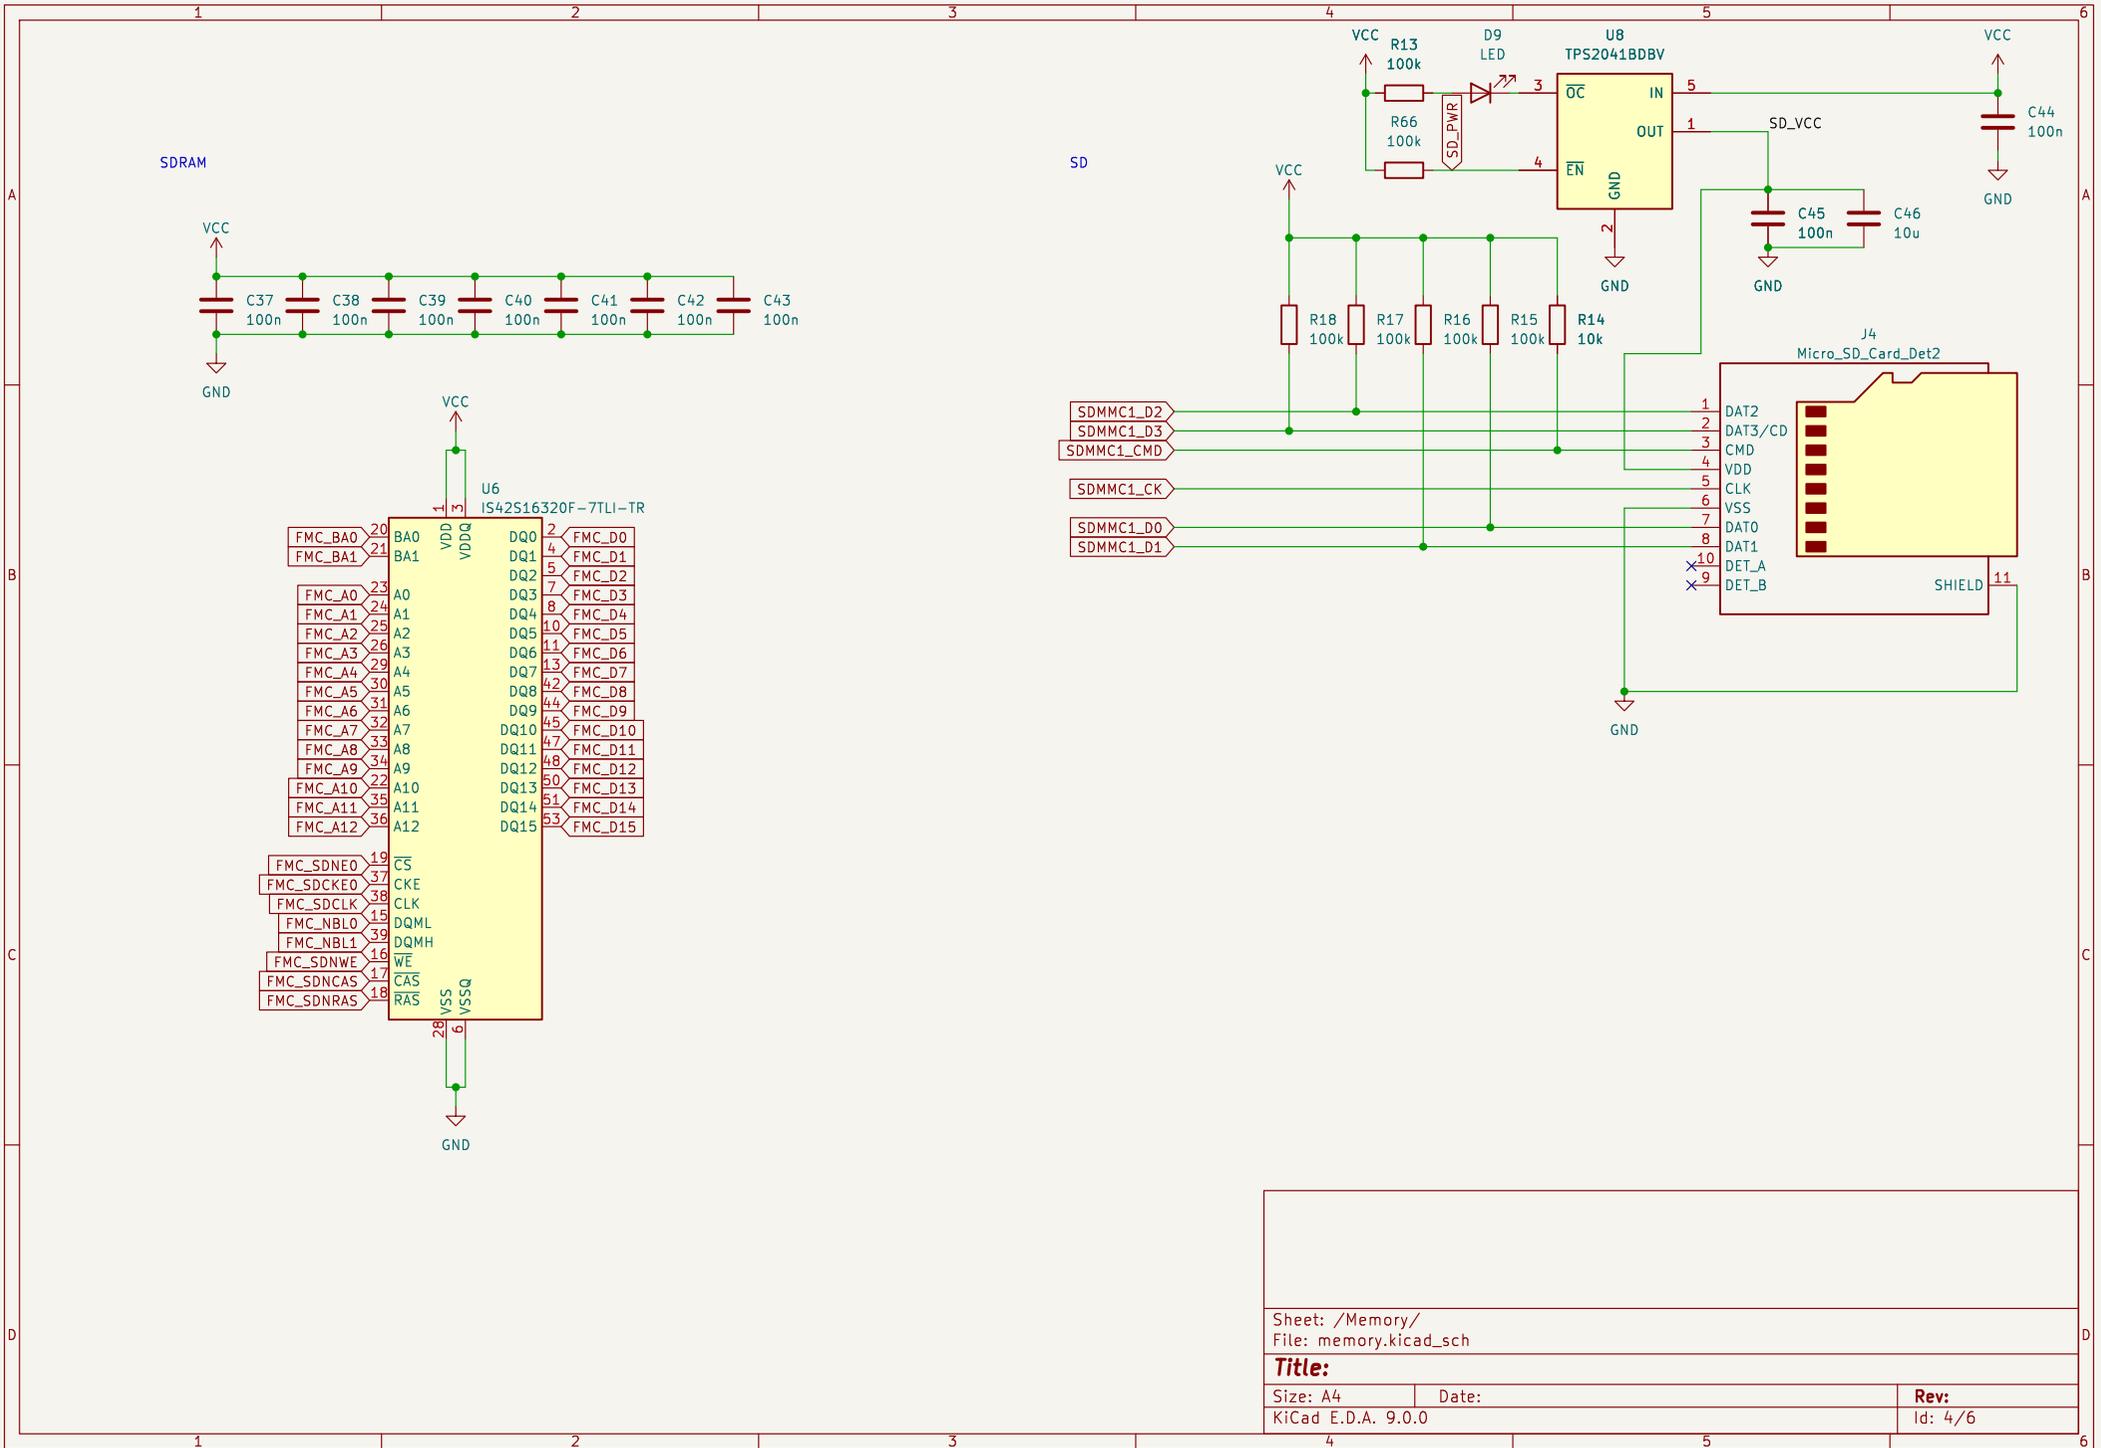

Sheet: /Memory/
 File: memory.kicad_sch



Title:

Size: A4
 KiCad E.D.A. 9.0.0

Date:

Rev:
 Id: 4/6

TODO needs active output stage (?use headphone opamp) TPA6110A2
 TODO consider PCM1789 for programmable voltage control
 TODO needs ferrite bead between VCC and AVCC

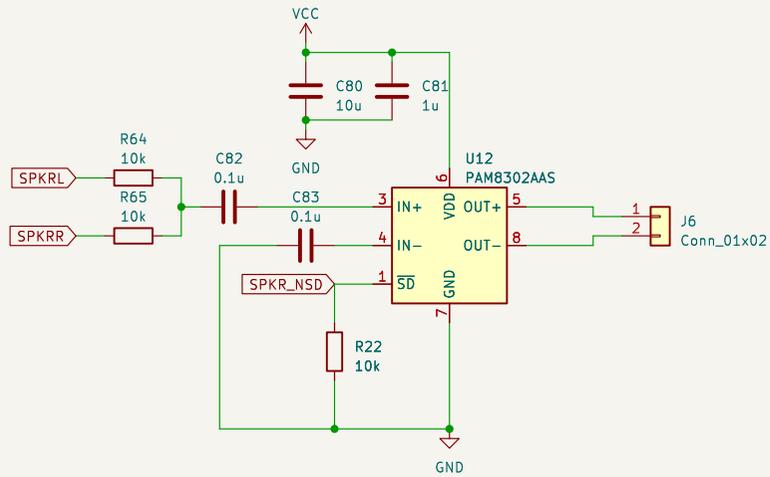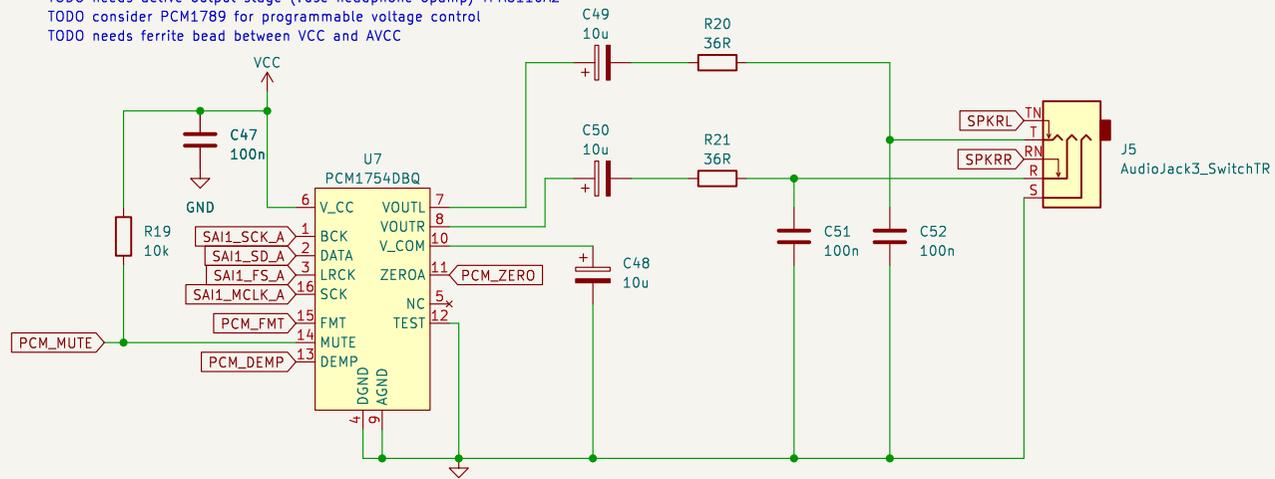





Sheet: /Audio/
 File: audio.kicad_sch

Title:

Size: A4
 KiCad E.D.A. 9.0.0

Date:

Rev:
 Id: 5/6

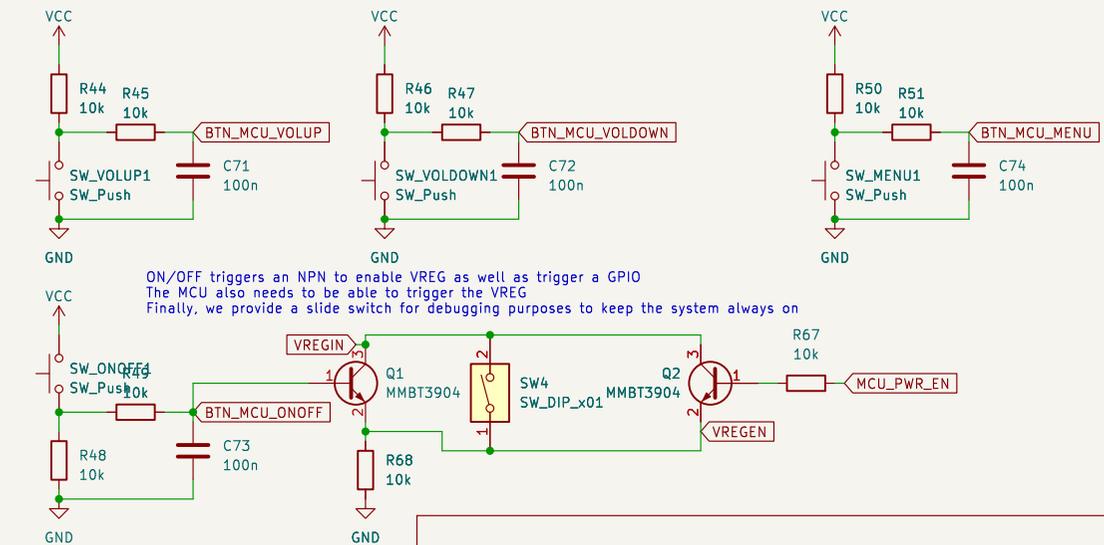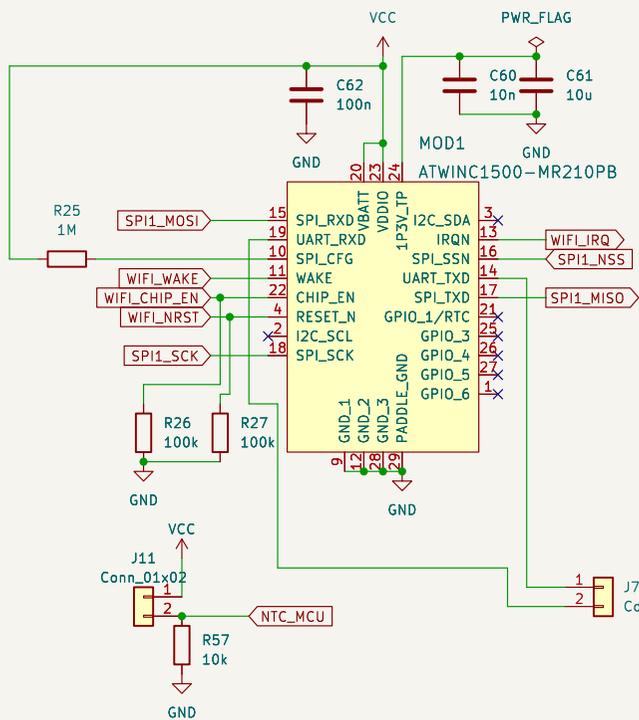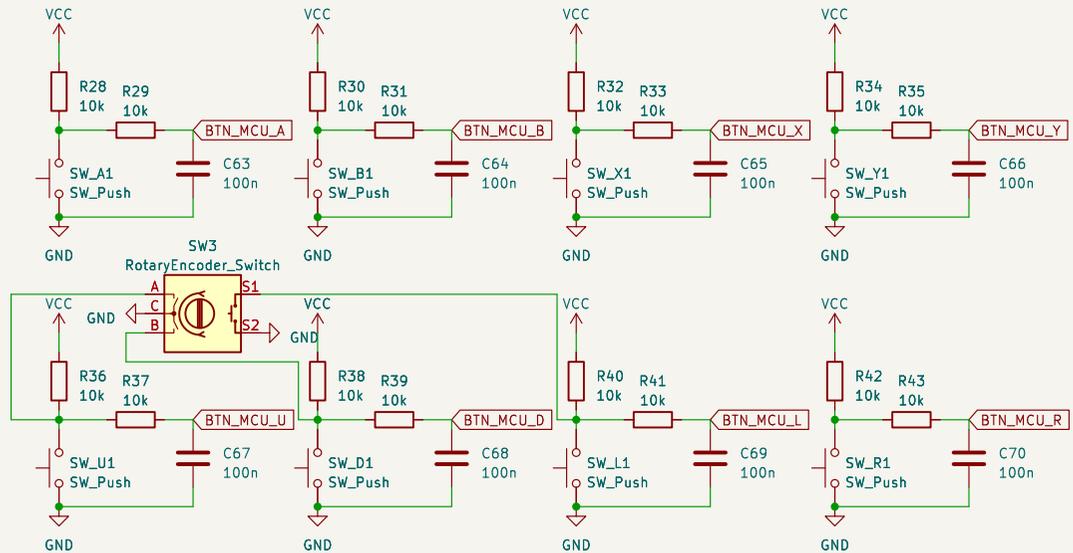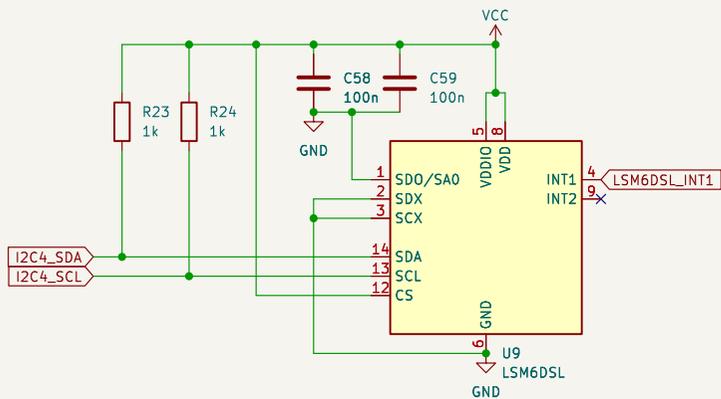

Sheet: /Interface/
 File: interface.kicad_sch

Title:

Size: A4
 KiCad E.D.A. 9.0.0

Date:

Rev:
 Id: 6/6