





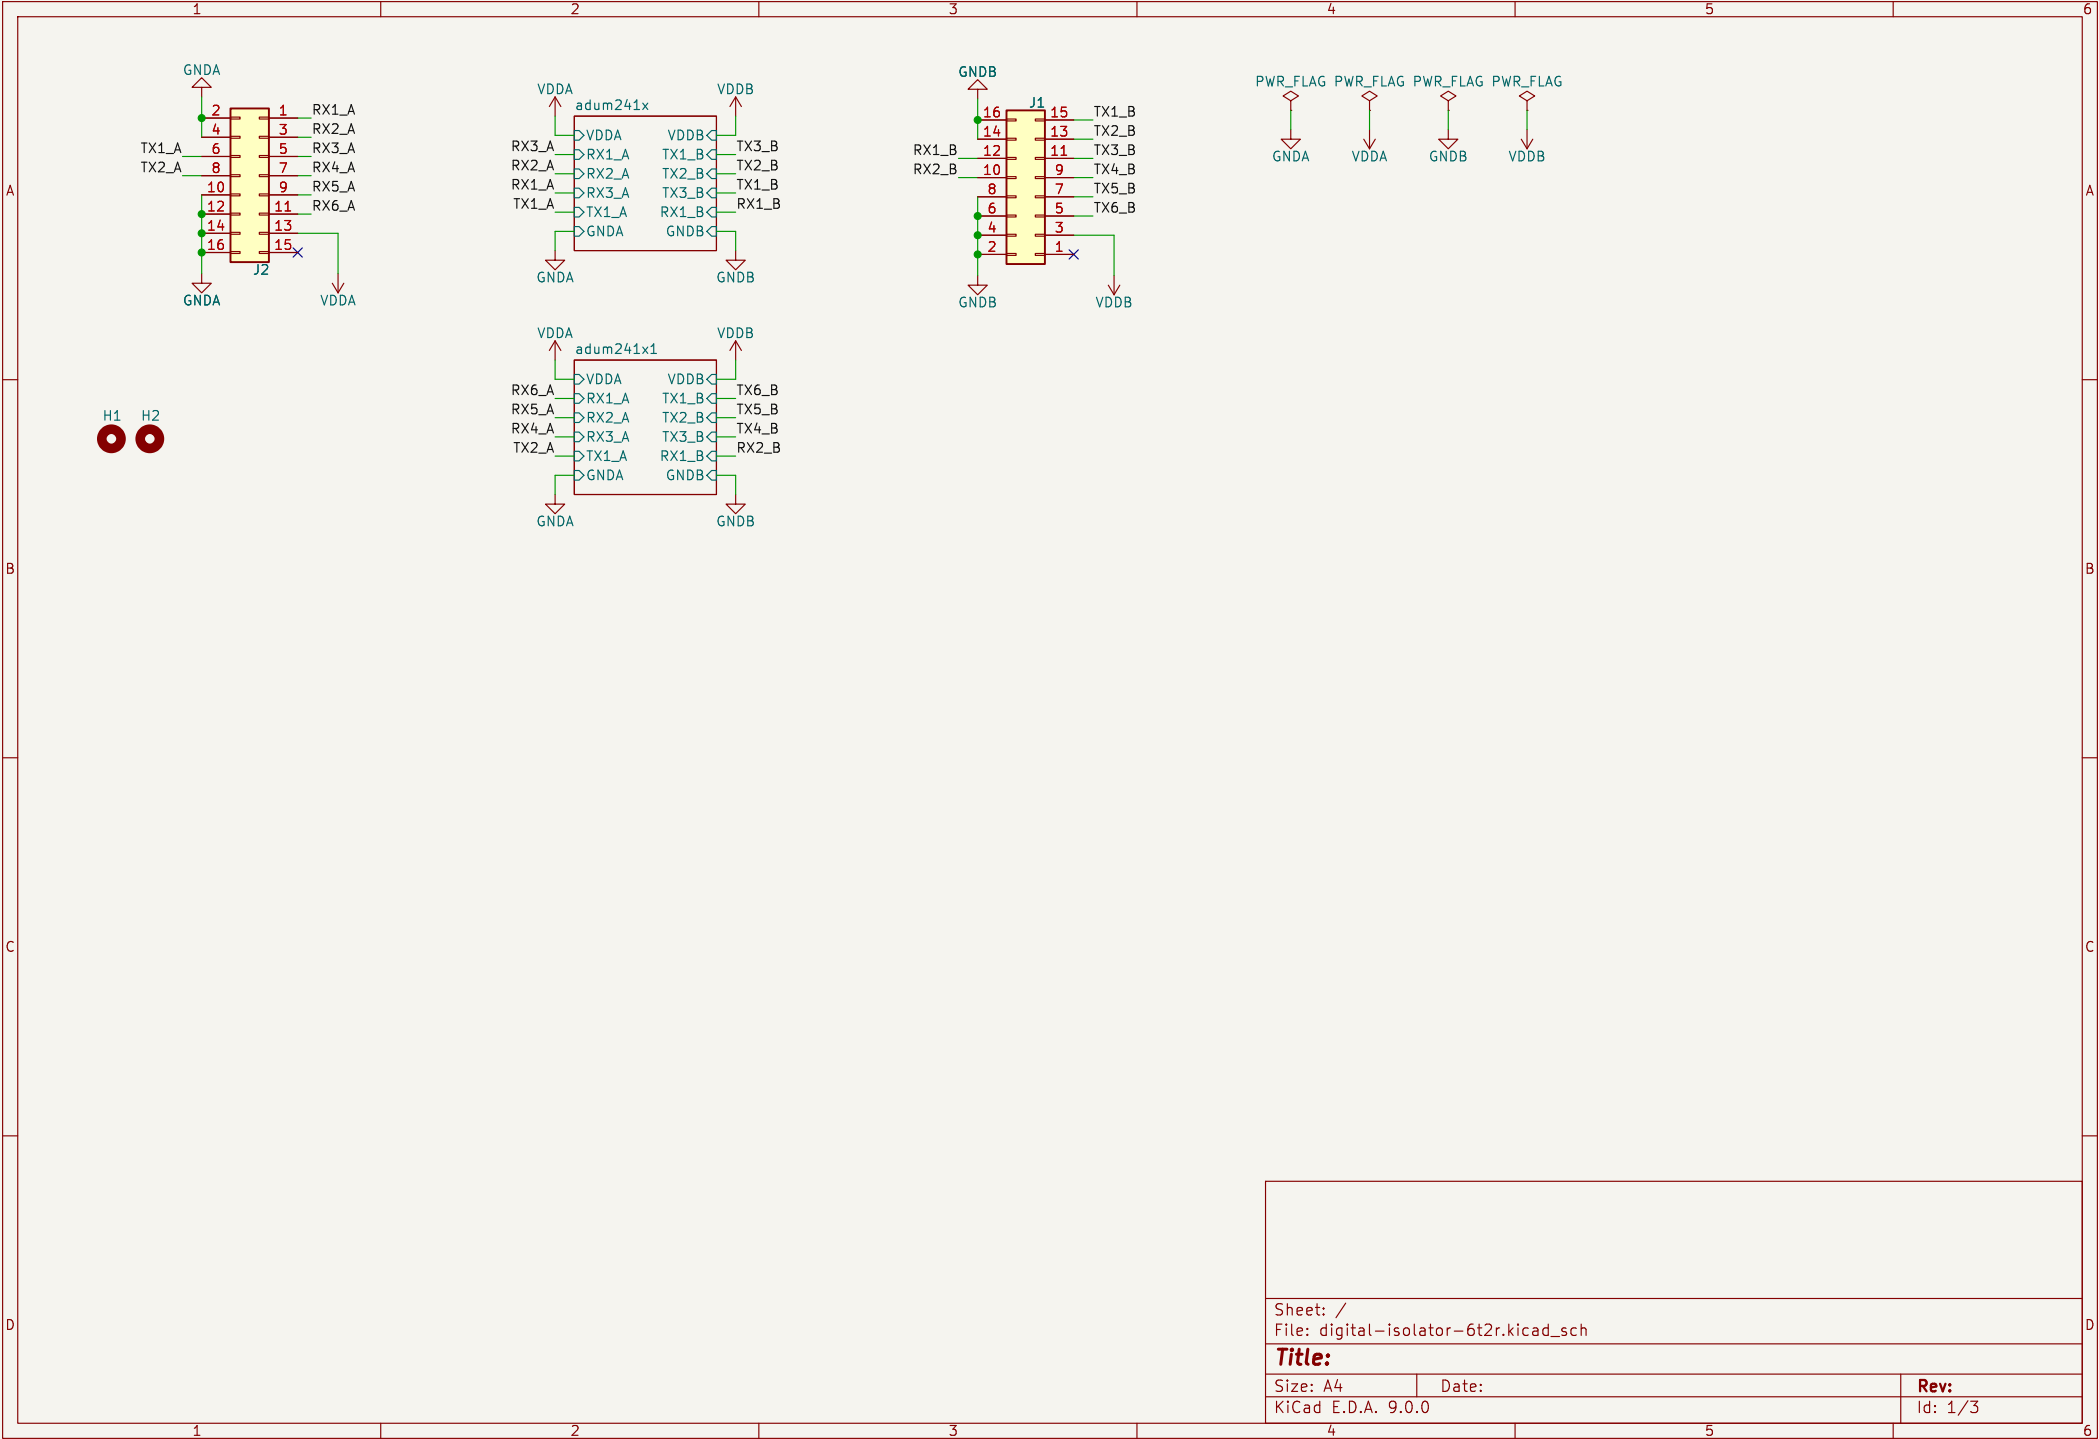

[2] The datasheet does not say anything about leaving the inputs floating. However, searching on the web, we'll find discussion on Analog's forum about unused pins, and they recommend to ground them. Thus, as precaution, I'm putting these pull-down resistors on the inputs. They say that grounding unused pin results in lower emissions.

